AmCraft
MANUFACTURING, INC.

Wall Mount End Stop
- Flange Up or Down available
- Includes 1 set screw

Curved track section needs support on each end of curve.

Floor Mount Split Support
- Inserted in Column
- Provides support to the track
- Does not connect track
- Can be placed anywhere along the track but not over a connector

Supports are needed every 5ft of track.

Floor Mount Connector
- Inserted in Column
- Connects straight track sections
- Also provides support to the track
- Includes 2 set screws

Adjustable End Stop

Floor Mount Base Plate
- Base that connects to Column
- Includes 2 Bolts & Lock Nuts

Floor Mount Column
- Connects to Base Plate
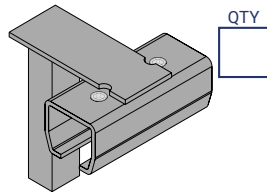- Connector or Split Support inserted on top

Step 1 - Item Quantity Check

Make sure you received all the parts you ordered by:

☐ Take the packing list on the side of one of the boxes off
☐ Compare packing list with the received parts
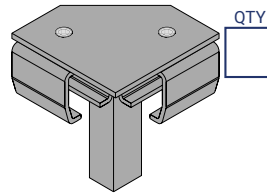☐ If you need a visual matching of the part number please note page 2

AmCraft
MANUFACTURING, INC.

QTY

Floor Mount Connector

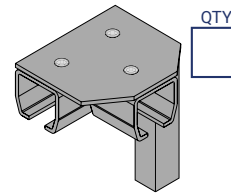2x Set Screws included

P/N: FCC-K55A

QTY
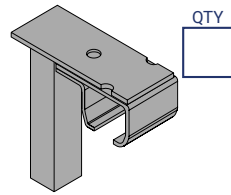
Floor Mount Split Support
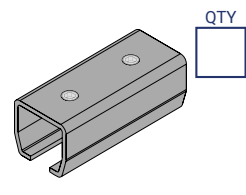
P/N: FCS-K55

QTY

Floor Mount Corner Connector
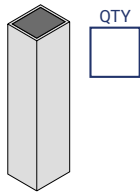
2x Set Screws included

P/N: FCA-K52

QTY

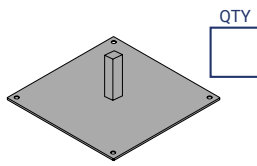**Floor Mount T-Connector**

3x Set Screws included

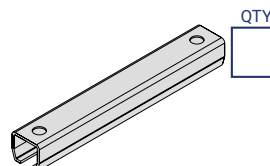P/N: FCT-K53

QTY

Plain Connector

P/N: PC-K38

QTY

Floor Column

QTY

Floor Mount Base Plate (12"x12")

P/N: FCBFC6P-K51

QTY

Straight Track

QTY
QTY
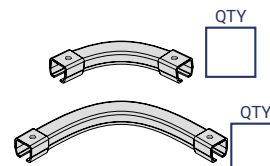
Curve Track

45° - P/N: 45P-K27

90° - P/N: 90P-K25

2x Set Screws included

QTY
QTY
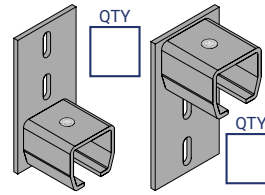
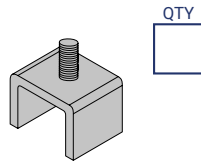**Wall Mount End Stop**

Flange Up - P/N: WMESU-K33

Flange Down - P/N: WMESD-K32

QTY
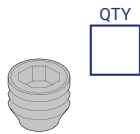
Set Screw

All Set Screws are in one package

QTY

Adjustable End Stop

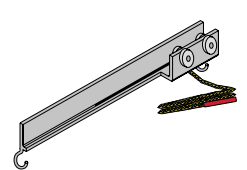P/N: ESA-K31A

QTY

Roller

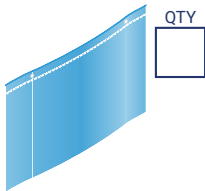**Nylon** - P/N: NY-K42

Steel - P/N: SR-K44

QTY
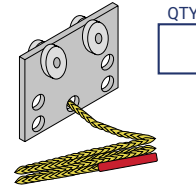
Pull Trolley Steel Rollers

4ft Rope - P/N: PRT-K80

10ft Rope - P/N: PRT-K

Overlap Trolley Steel Rollers

4ft Rope - P/N: OLT-K70

10ft Rope - P/N: OLT-10

QTY

QTY

Curtains with Grommets

QTY

Chain Weighted Bottom

Sewn into hem

QTY
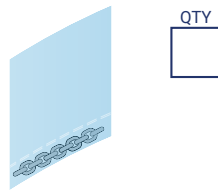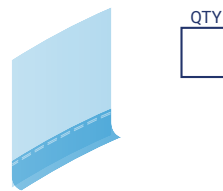
Floor Sweep

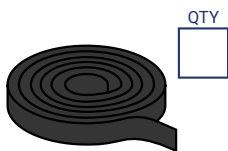Attached to curtain

QTY
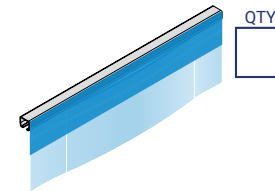
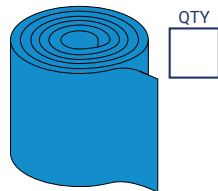**Valance**

Attached to track

QTY
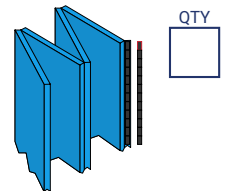
Edge Sealing

Wall Attachment Strip (2"x4")

Thermal & Acoustic Only

QTY

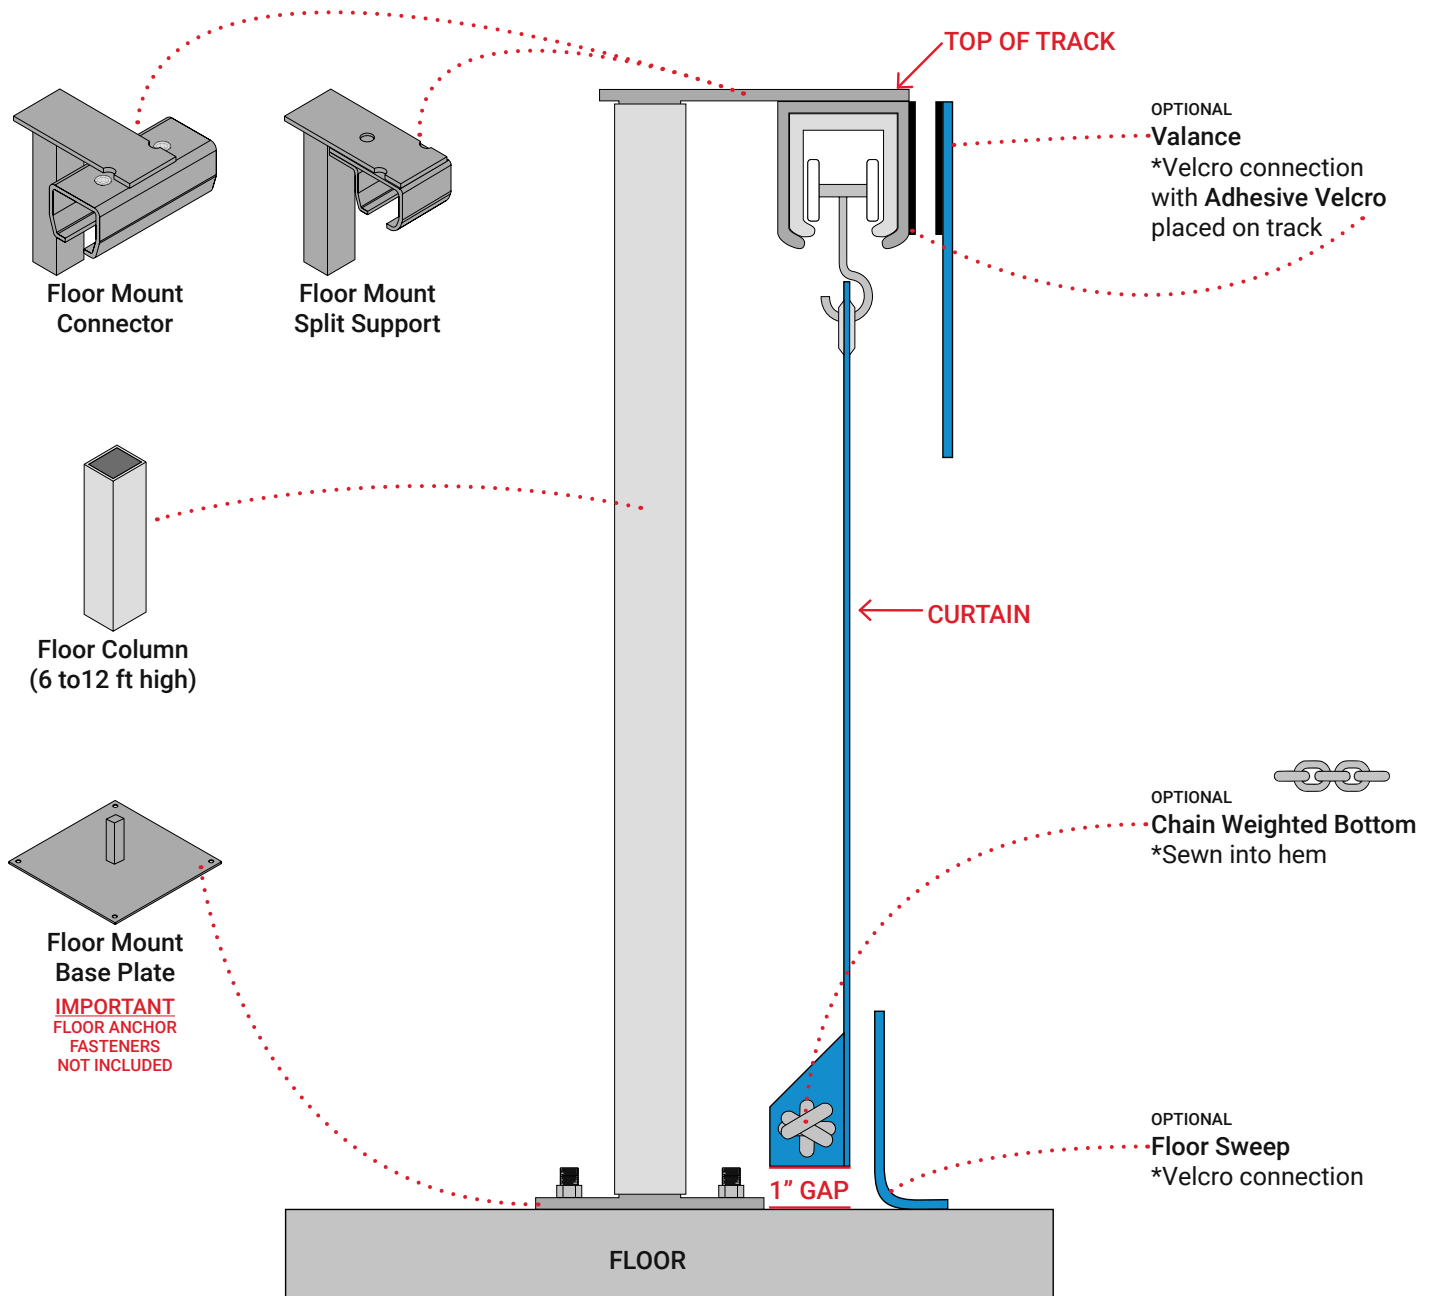**Adhesive Velcro**

Color - Black, White

QTY

Vinyl Tape

Color - Royal Blue, Gray, Black, White

Step 2 - Measurement Check

IMPORTANT NOTE: The TOP OF THE TRACK has to be mounted at _____ ft. _____ in. off the floor.

There will be a 1" gap between the bottom edge of the curtain and the floor. Floor sweeps are not included, please see below drawing. This dimension is also located atop your quotation. Make sure that the track is level, to ensure that the trolleys slide smoothly.

Floor Mount Connector

Floor Mount Split Support

Floor Column (6 to12 ft high)

Floor Mount Base Plate

IMPORTANT
FLOOR ANCHOR FASTENERS NOT INCLUDED

TOP OF TRACK

OPTIONAL
Valance
*Velcro connection with **Adhesive Velcro** placed on track

CURTAIN

OPTIONAL
Chain Weighted Bottom
*Sewn into hem

OPTIONAL
Floor Sweep
*Velcro connection

1" GAP

FLOOR

INSTALLATION INSTRUCTIONS

PAGE 4

Step 3 - Determining where to use Connectors, Plain Connectors and Split Supports
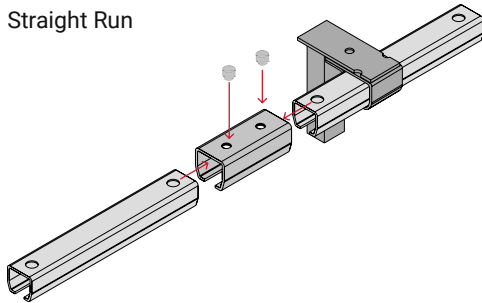
Straight Run
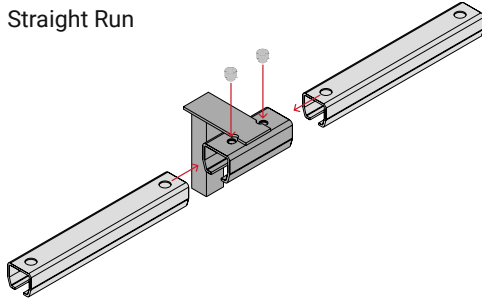
Floor Mount Connector

Connects two pieces of track together and provides a flange to support the connection from above.

Only used if there is existing structure above the connector to provide support.

Straight Run

Plain Connector with Floor Mount Split Support

If there is no existing structure support available above the track connection, use a plain connector. Then, in order to support the track at 5' intervals, place a split support on the track. Split supports can be placed anywhere along the track except for directly on top of a plain connector.
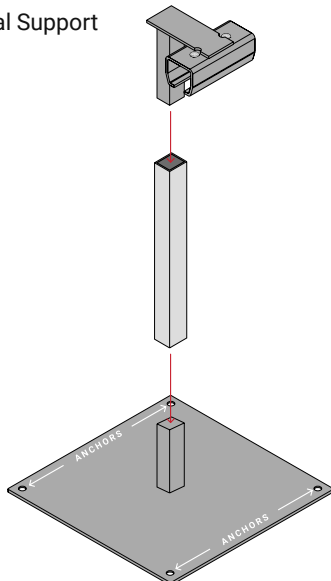
90° Curve
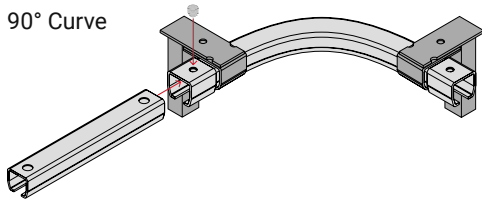
Floor Mount Split Support with 90° or 45° Track Curve

These have a plain connector welded onto each end. Place the split support next to said connector both ends of the curved track.

Vertical Support

Floor Mount Base Plate and Columns

IMPORTANT: AmCraft Manufacturing does not provide floor anchor fasteners. Make sure you have Base Plates and Columns supporting track every 5'

INSTALLATION INSTRUCTIONS

PAGE 5

Step 4 - Placing Rollers & Trolleys

Important: The trolleys and the adjustable end stops need to be placed in the track before securing the end of the track to a wall.
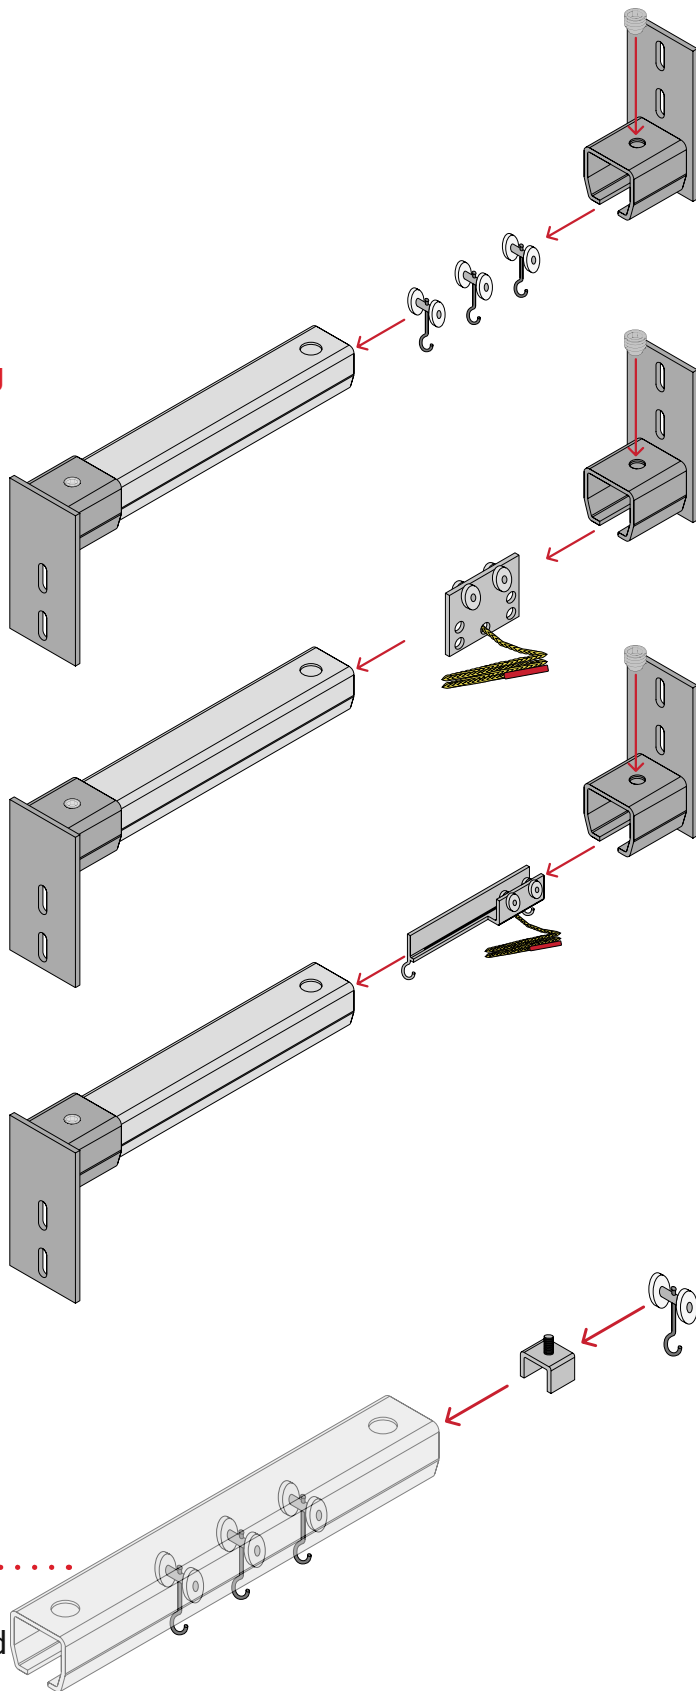
Each grommet on your curtain needs a Trolley. Please slide the amount of trolleys needed to hang your curtain into the track (be sure to consider special trolleys, as detailed below).
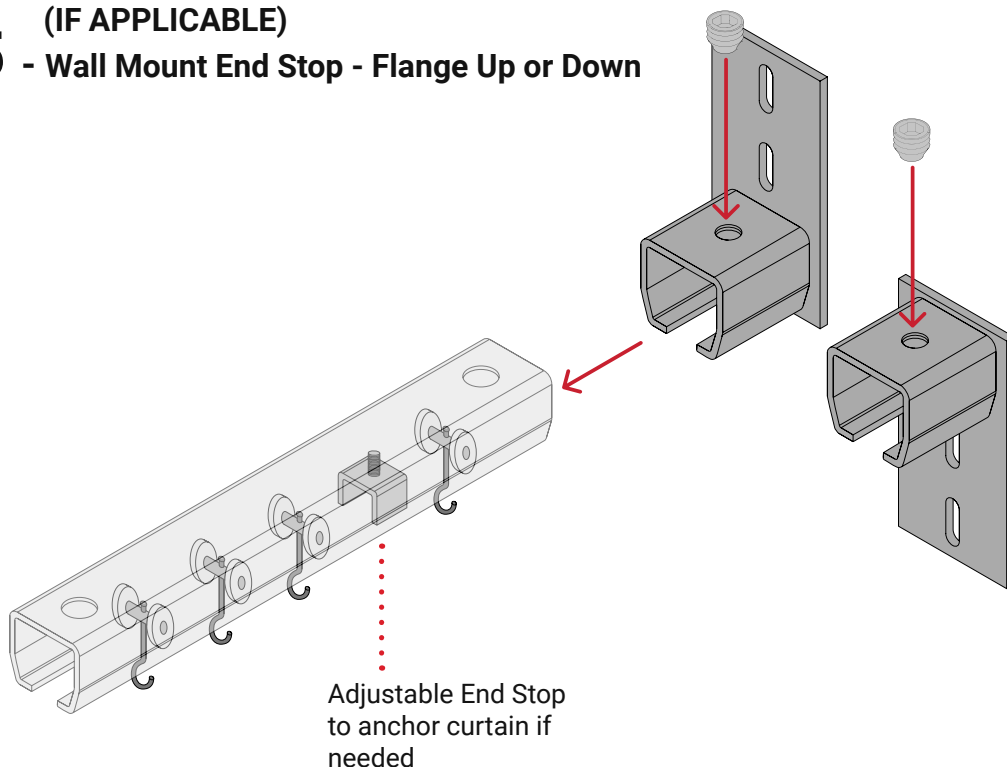
Sliding in the trolleys

Sliding in a pull rope trolley (does not need a grommet). Will be to the curtain.

Sliding in an overlap trolley (used to allow 2 curtains to overlap where they meet). Needs 2 grommets on the same curtain (should be placed on the curtain that you want to bypass/overlap the other).

Sliding in an adjustable end stop (to anchor one end of the curtain, so that it does not move, place the adjustable end stop between the last and second-to-last trolleys)

![AmCraft Manufacturing, Inc. logo]

INSTALLATION INSTRUCTIONS

(IF APPLICABLE)

Step 5 - Wall Mount End Stop - Flange Up or Down

Adjustable End Stop
to anchor curtain if
needed

Step 6 - Hanging Curtain

Align and match curtain grommets with
available trolley hooks.