INSTALLATION INSTRUCTIONS

Wall Mount End Stop
- Flange Up or Down available
- Includes 1 set screw

Wall Mount Split Support
- Flange Up or Down available
- Provides support to the track
- Does not connect track
- Can be placed anywhere along the track but not over a connector

5ft

5ft

5ft

5ft

Supports are needed every 5ft of track.

Plain Connector
- Connects straight track
- No support
- Includes 2 set screws

Adjustable End Stop

Wall Mount Connector
- Flange Up or Down available
- Connects straight track sections
- Also provides support to the track
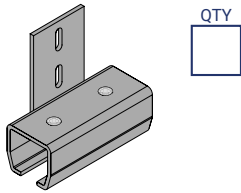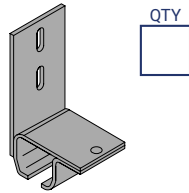- Includes 2 set screws

Step 1 - Item Quantity Check

## Make sure you received all the parts you ordered by:

- ☐ Take the packing list on the side of one of the boxes off
- ☐ Compare packing list with the received parts
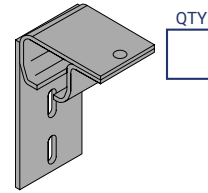- ☐ If you need a visual matching of the part number please note page 2

847-439-4565 | sales@amcraftonline.com | www.amcraftmanufacturing.com

INSTALLATION INSTRUCTIONS

QTY ☐

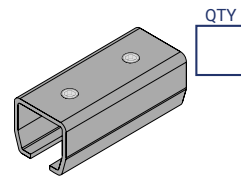**Wall Connector Flange Up**
2x Set Screws included
P/N: CMC-K37

QTY ☐

Wall Split Support Flange Up
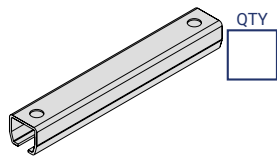P/N: CMS-K37-A
Includes 1 Locking Nut

QTY ☐
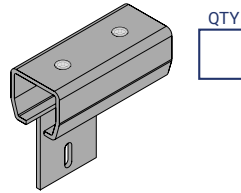
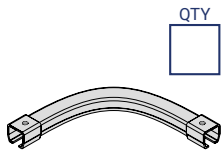**Wall Connector Flange Down**
2x Set Screws included
P/N: CMA-K62

QTY ☐

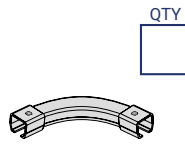**Wall Split Support Flange Down**
3x Set Screws included
P/N: CMT-K63

QTY ☐

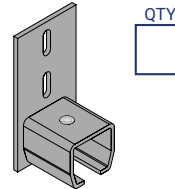**Plain Connector**
P/N: PC-K38

QTY ☐
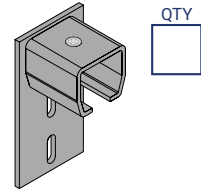
Straight Track

QTY ☐

90° Curve Track
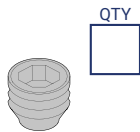2x Set Screws included
P/N: 90P-K25

QTY ☐

45° Curve Track
2x Set Screws included
P/N: 45P-K27
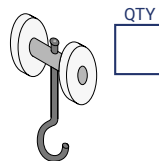
QTY ☐

Wall Mount End Stop Flange Up
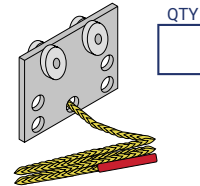P/N: WMESU-K33

QTY ☐

Wall Mount End Stop Flange Down
P/N: WMESD-K32

QTY ☐
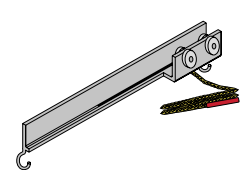
Set Screw
All Set Screws are in one package

QTY ☐
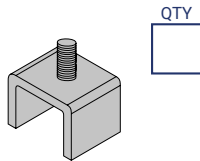
Adjustable End Stop
P/N: ESA-K31A

QTY ☐

Roller
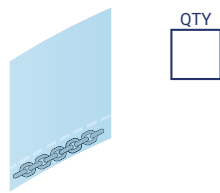**Nylon** - P/N: NY-K42
Steel - P/N: SR-K44

QTY ☐

Pull Trolley Steel Rollers
4ft Rope - P/N: PRT-K80
10ft Rope - P/N: PRT-K

Overlap Trolley Steel Rollers
4ft Rope - P/N: OLT-K70
10ft Rope - P/N: OLT-10

QTY ☐

QTY ☐
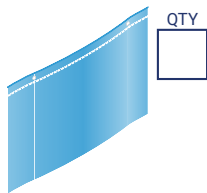
Curtains with Grommets

QTY ☐

Chain Weighted Bottom
Sewn into hem

QTY ☐
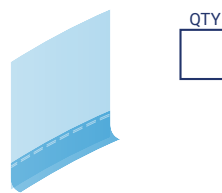
Floor Sweep
Attached to curtain

QTY ☐
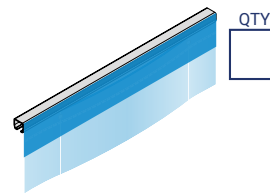
Valance
Attached to track

QTY ☐
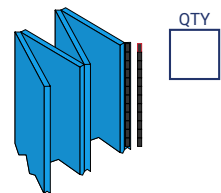
Edge Sealing
Wall Attachment Strip (2"x4")
Thermal & Acoustic Only

QTY ☐
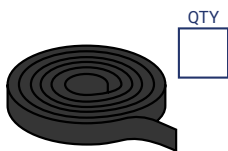
Adhesive Velcro
Color - Black, White

QTY ☐
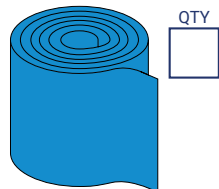
Vinyl Tape
Color - Royal Blue, Gray, Black, White

Step 2 - Determine Wall Mount Type

Under Mount

Flush Mount

Obstruction

Flush Mount - Extended

8" min. 8" min.

INSTALLATION INSTRUCTIONS

Step 3 - Measurement Check

IMPORTANT NOTE: The TOP OF THE TRACK has to be mounted at _____ ft. _____ in. off the floor.
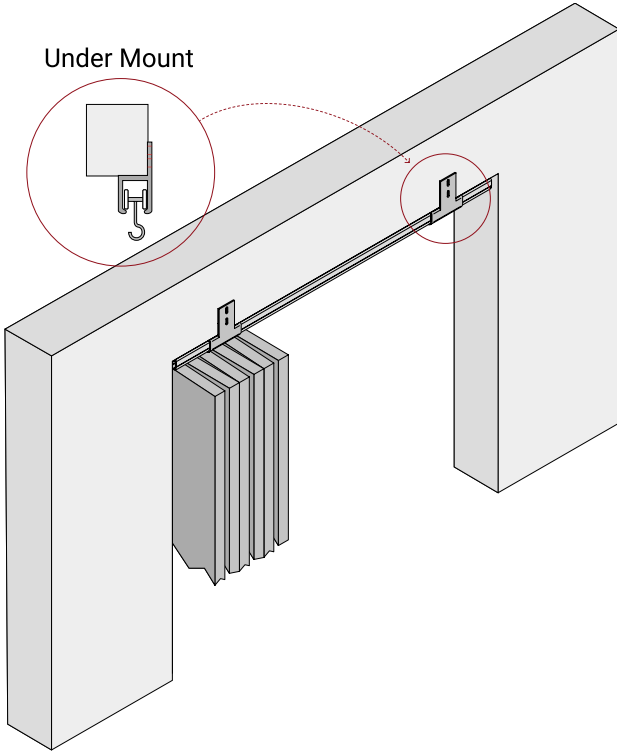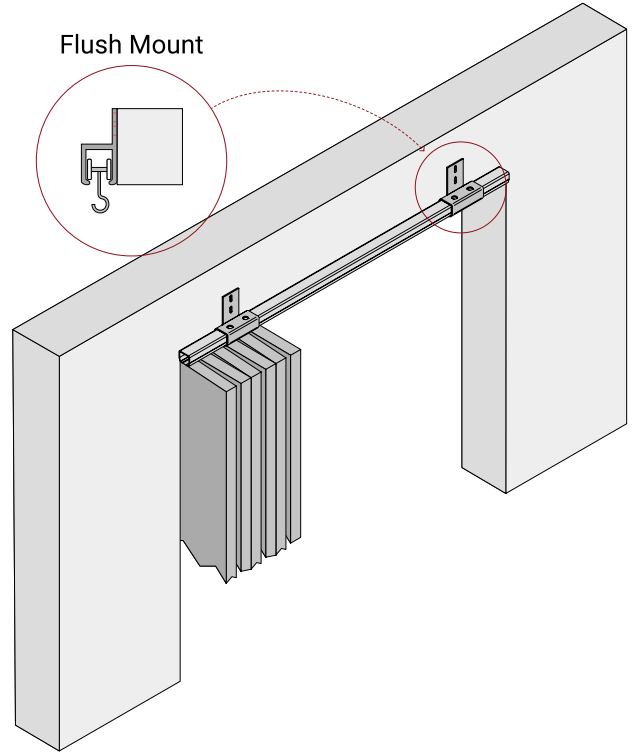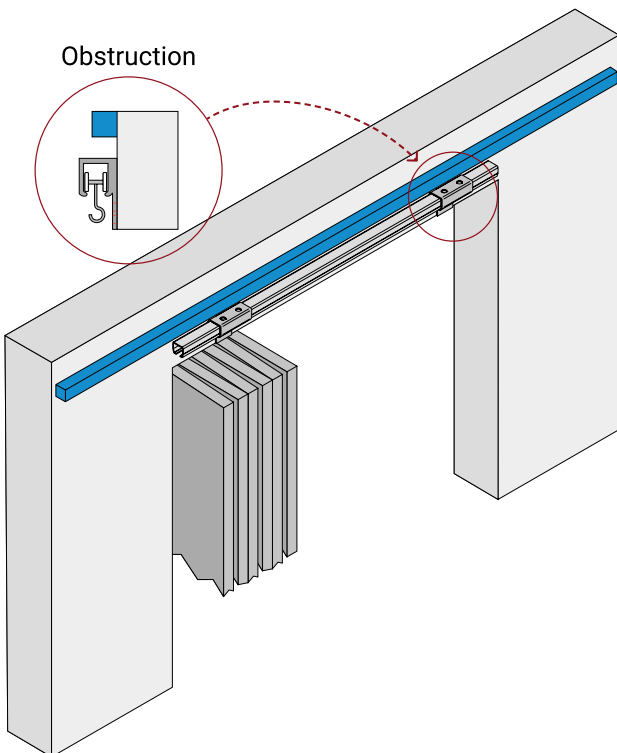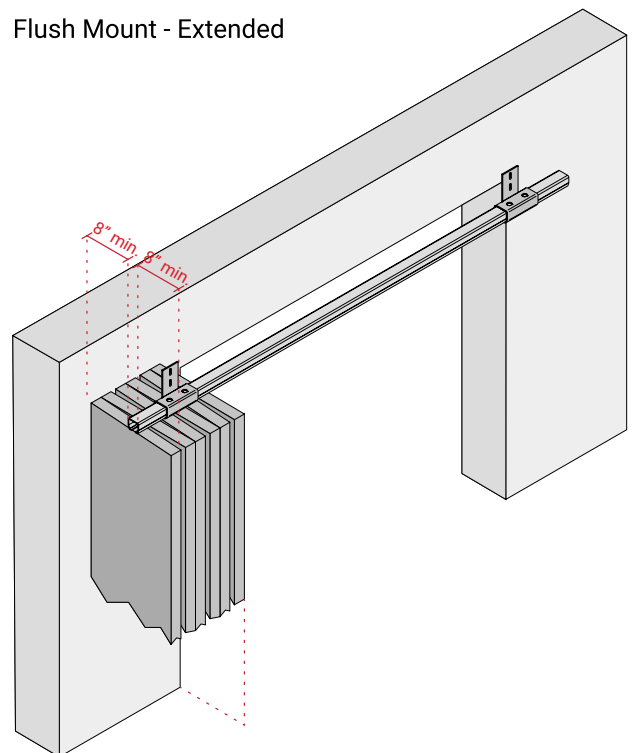
There will be a 1" gap between the bottom edge of the curtain and the floor. Floor sweeps are not included, please see below drawing. This dimension is also located atop your quotation. Make sure that the track is level, to ensure that the trolleys slide smoothly.

Existing Structure Drop Wall Entryway

FLANGE UP

TOP OF TRACK

Wall Connector Flange Up

Wall Split Support Flange Up

split support 2-7/8"

3"

1.5"

.5"

Track to top of Curtain

OPTIONAL
Valance
*Velcro connection with **Adhesive Velcro** placed on track

← **CURTAIN**

OPTIONAL
Chain Weighted Bottom
*Sewn into hem

FLANGE DOWN

Wall Connector Flange Down

Wall Split Support Flange Down

split support 2-7/8"

1.5"

.5"

Track to top of Curtain

2-5/8"

OPTIONAL
Floor Sweep
*Velcro connection

1" GAP

FLOOR

AmCraft
MANUFACTURING, INC.

Step 4 - Determining where to use Connectors, Plain Connectors and Split Supports
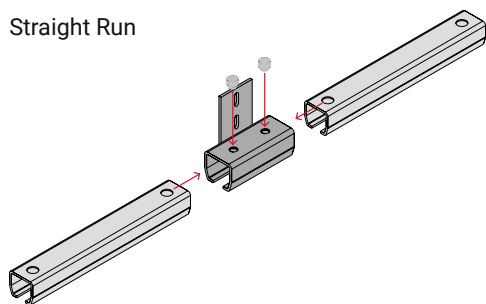
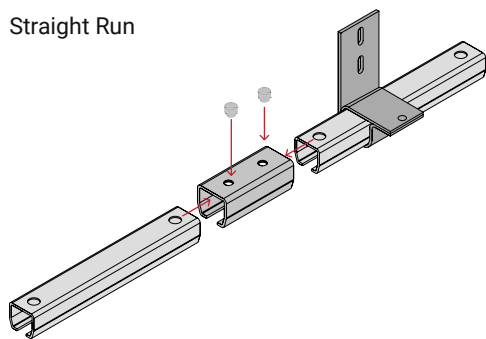## PLEASE NOTE: AmCraft Manufacturing does not provide wall anchor fasteners

Straight Run

Wall Connector

Connects two pieces of track together and supports the track as well. Every 5' support is recommended.
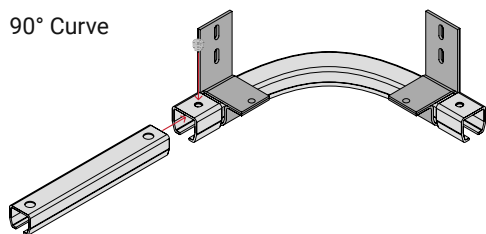
Straight Run

Plain Connector with Wall Split Support

Using a plain connector with a split support. Please use a support every 5'. Split supports can be placed anywhere along the track except for directly on top of a plain connector.
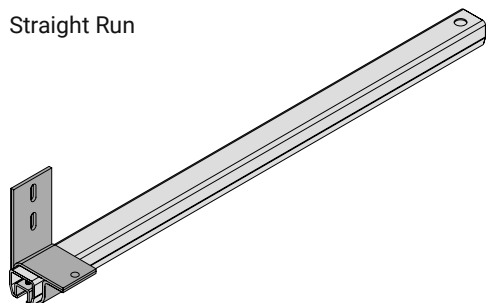
90° Curve

Wall Split Support with 90° or 45° Track Curve

These have a plain connector welded onto each end. Place the split support next to said connector both ends of the curved track.

Straight Run

Wall Split Support

Used to support the end of a track run if the track is not run all the way to a wall.
Also, used as mentioned above.

![AmCraft Manufacturing, Inc. logo]

Step 5 - Placing Rollers & Trolleys

Important: The trolleys and the adjustable end stops need to be placed in the track before securing the end of the track to a wall.

Each grommet on your curtain needs a Trolley. Please slide the amount of trolleys needed to hang your curtain into the track (be sure to consider special trolleys, as detailed below).

Sliding in the trolleys ···························

Sliding in a pull rope trolley (does not need a grommet). Will be to the curtain.

Sliding in an overlap trolley (used to allow 2 curtains to overlap where they meet). Needs 2 grommets on the same curtain (should be placed on the curtain that you want to bypass/overlap the other).

Sliding in an adjustable end stop (to anchor one end of the curtain, so that it does not move, place the adjustable end stop between the last and second-to-last trolleys)

![AmCraft Manufacturing, Inc. logo]
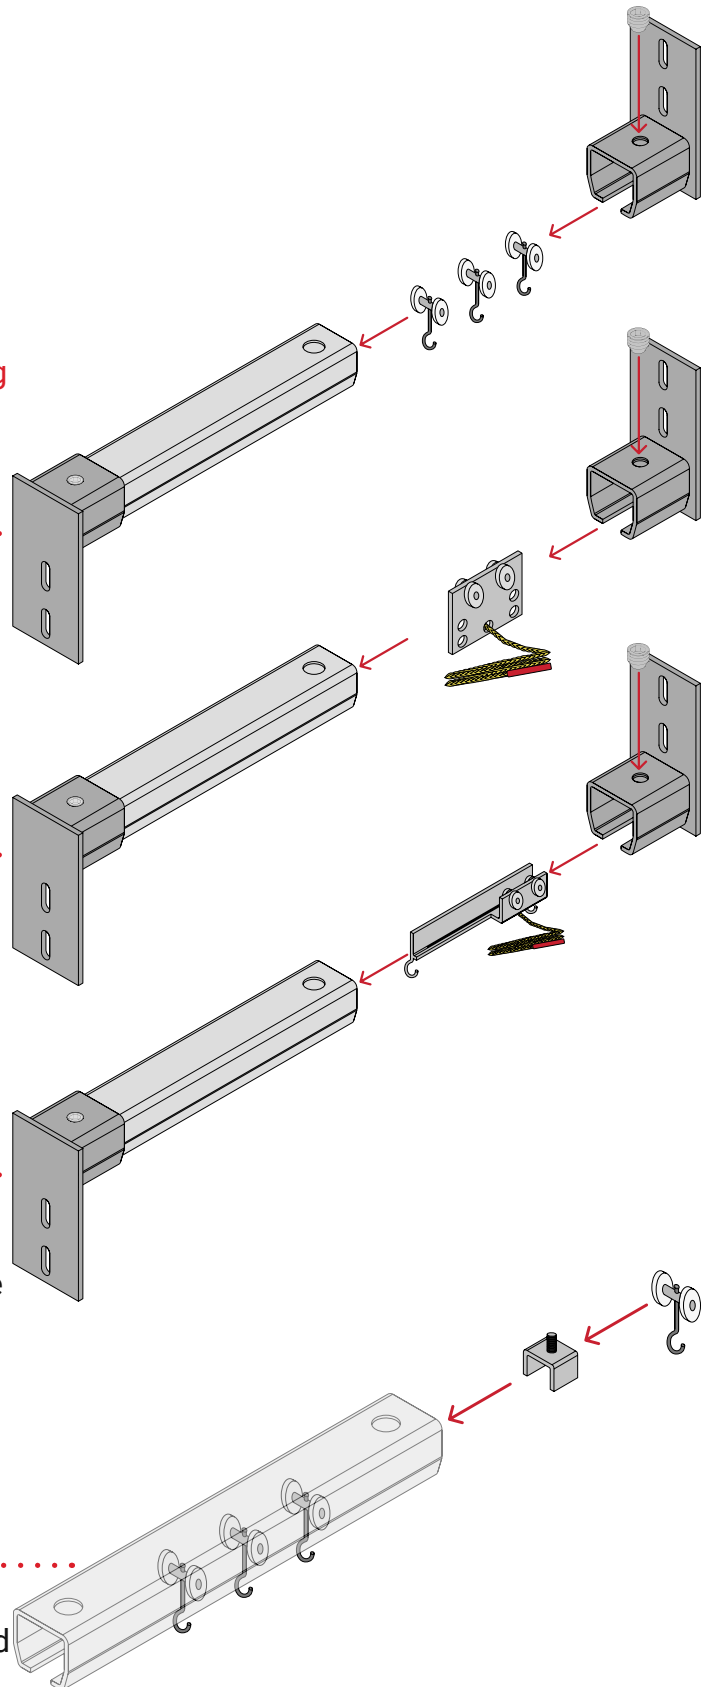
Step 6 **(IF APPLICABLE)**
- Wall Mount End Stop - Flange Up or Down

Adjustable End Stop
to anchor curtain if
needed
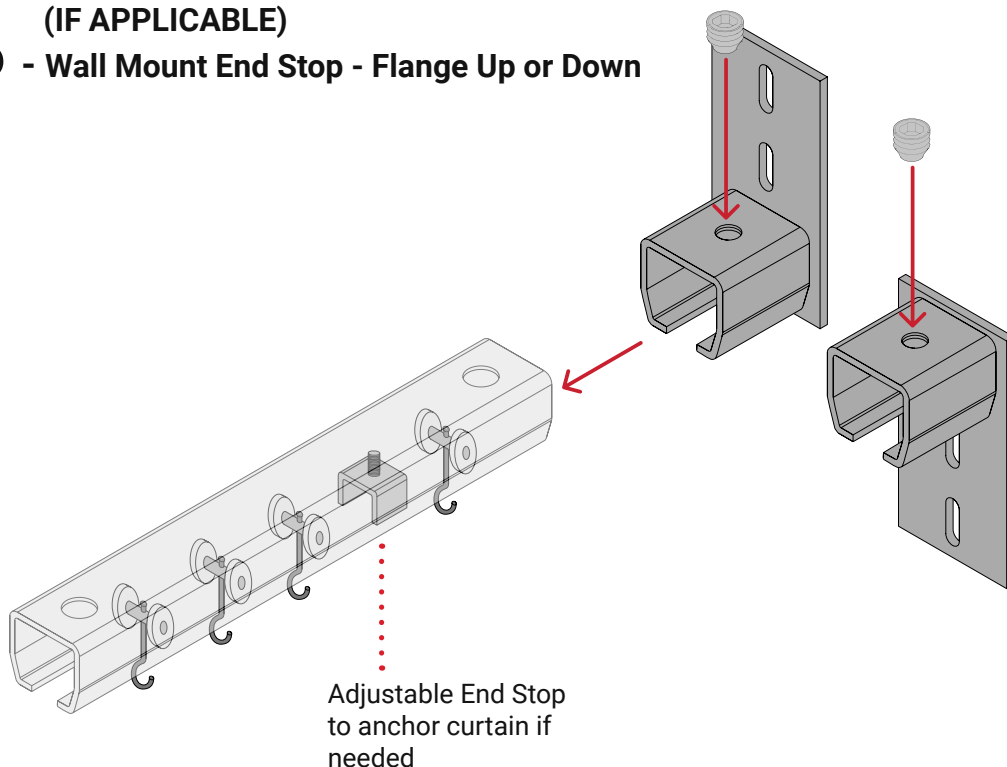
Step 7 **- Hanging Curtain**

Align and match curtain grommets with
available trolley hooks.

INSTALLATION INSTRUCTIONS